



# **Fire Protective Safe FP4E**

OPERATING INSTRUCTIONS





**Fire Protective Safe**

## **OPERATING INSTRUCTIONS FOR SAFE & ELECTRONIC CONTROL PANEL**

### **IMPORTANT:**

- Please keep codes and emergency key in a safe place outside of this safe.
- Keep your personal code secure.
- Do not use personal data (eg: birthdays, telephone numbers etc).
- If the safe will not be used for a long period of time, please take out batteries.
- For security reasons the pre-selected user code and master code should be changed.
- If you have any questions, please contact your local dealer.

### **GETTING STARTED:**

- On the front control panel, using a small pin push the small plastic cover to the lower right.
- Insert key into hole and turn key anticlockwise until it stops and turn handle clockwise. The door will open. With the door open, turn the key clockwise and the handle anticlockwise – the locking bars in door will extend to the locked position – remove the key.
- Place key back in hole. Turn key anticlockwise and handle clockwise – locking bars will retract into door. Close door and turn key clockwise and handle anticlockwise. The safe is now locked. Take key out and replace plastic cover plate.

### **HOW TO INSTALL THE BATTERIES:**

- Take off the cover of the battery box on the inside of the door. Put in type LR 6 / AA / 1.5 V (Alkaline) batteries. You will hear several tones followed by a melody and the display showing “All Ready”. Replace battery cover.

Note: If the batteries are low in charge, the display will show “Lo Batt”. If that happens, replace the complete set of batteries. Dispose of flat batteries in rubbish bin.

### **HOW TO OPEN THE SAFE:**

- Press “#” key – “\_ \_ \_ \_” appears in display. Enter the user code (pre-selected 1-2-3-4) and press “#”. After the code has been entered, “OPEN” appears in display. Turn the handle clockwise within 6 seconds in order to open the door.



**Fire Protective Safe**

#### **HOW TO CLOSE THE SAFE:**

- Close door on safe and turn handle anticlockwise.

#### **HOW TO PROGRAM YOUR NEW USER CODE:**

- Press “#” key, “ \_ \_ \_ \_ ” appears. Enter the user code (pre-selected 1-2-3-4) and press “#”.
- Press “\*” key and enter your new code (1 to 8 digits) and press “#” key. After the code has been entered successfully, you will hear a melody.

#### **HOW TO PROGRAM NEW MASTER CODE**

- Press “#” key, “ \_ \_ \_ \_ ” appears. Enter the master code (pre-selected 1-2-3-4-5-6) and press “#”.
- Press “\*” key and enter your new code (1 to 8 digits) and press “#” key. After the code has been entered successfully, you will hear melody.

#### **CODE ERROR:**

- If an incorrect code is entered, the display shows “ERROR” and a series of short beeps is heard.
- Enter the correct code and press “#” key, “OPEN” appears on display. Turn handle anticlockwise to open safe.

#### **HOW TO SET DATE AND TIME**

- The date is displayed in the format of year / month / day, the time in hour / minute and the day in numbers 1 = Monday, 2 = Tuesday....and 7= Sunday.
- To change the settings, press the “\*” key. With the keys 0 (down) and 8 (up) you can enter the correct date, time and day. The Number must be entered within 6 seconds, otherwise the process will be interrupted.
- Press “#” key, if the desired number has been entered.
- Press “#” again to switch to the next field.



## **Fire Protective Safe**

### **RESETTING CODES**

- If a user or master code has been forgotten, press the button on the inside of the front door to return to factory settings. User code, Master code, date and time must be then reprogrammed.

### **INSTALLATION:**

- The safe is designed to be floor mounted.

### **TECHNICAL INFORMATION**

- Power Supply: 5 x LR6/AA/1.5V (Alkaline)  
Working Humidity: 20%~90% rH – non-condensed / non-condensing